# QuickGuide

Driver and Hardware Installation

DVDXpress DX2

MODEL: USBAV-709

English

www.adstech.com

1

3. On the System window select Advanced System Settings.

4. On the Advance System Settings window select "OK" and select Hardware tab on System Properties. Select on "Windows Update Driver Settings."

5. Then Windows Update Driver Settings will show select "Ask Me Each Time I connect a new Device" and press "OK".

6. Close the Control Panel after completing steps 1 to 5.

2

2. A screen of "Found New Hardware" will pop up, after its connected to a USB port. Select "Locate and install driver software (recommended)."

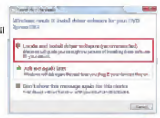

3. Select "Don't search online".

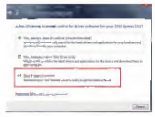

7

## Installation for Windows XP/2000

1. Insert the DVD Xpress DX2 CD-ROM drive.

2. Use the 3 RCA A/V cables (Yellow, White, Red) to connect your video source (VCR, DVD Player, Laser Disk Player, Camcorders, TV, etc.) to the DVD Xpress DX2 as shown below. Note: for computer not in Windows completely, use the USB cable to connect DVD Xpress DX2 into a USB port on the your PC.

After you plugged in the USB cable into the USB port, Windows will recognize the device and load the device drivers automatically. (Windows XP or Windows 2000 let Windows online search automatic search for the drivers. The drivers are located in the root directory of your DVD Xpress DX2 CD, usually your "D" drive. Windows searches the CD for drivers.)

Note:
We strongly recommend if port to use USB hub at the USB port on front of your PC when plugging this device.

13

## Getting Started

### Minimum System Requirements

- Intel® Pentium® III 1GHz or Higher / AMD Athlon/Duron 1 GHz
- Microsoft® Windows® Vista or XP/2000
- 256MB of RAM
- 1.2GB of available hard drive space for program Procedure
- 4 GB Hard Drive space for video capture and editing
- Windows®-compatible display (Recommend 1024x768 resolution)
- Windows®-compatible mouse or pointing device
- Windows®-compatible sound card
- Available USB 2.0 Port
- CD-ROM drive for software install
- CD-R/RW or DVD-R/RW drive required for saving movies onto CD or DVD

### Recommended System Requirements

- Intel® Pentium® 4 1.5GHz or C2D
- 512MB of RAM
- 20 GB free hard drive space
- 8X or faster CD-R drive

2

7. After completing the post installation procedure you can insert the DVD Xpress DX2 CD to your CD-ROM drive.

8. Browse the CD content by clicking Start then Computer.



9. Once in Computer window right click the CD-ROM icon and select "Open".

8

4. Select "I don't have the disc. Show me other options".

5. Select "Browse my computer for driver software (advanced)".

## Software Installation

Continue installing the key bundled software on to your system.

1. Show Suite DVD 2
2. DVD Player
3. Select Software which include:
   - PhotoDirector
   - CD Label Maker
   - Ulead

For more information on how to use the software and ArcSoft ShowBiz software, please open the Help File located in the main menu.

14

## Contents

Hardware:
- DVD Xpress DX2 Device
- USB 2.0 Cable
- RCA A/V Cable (RCA Male and (3) RCA Male)
- Installation CD
- User's Manual

CD Contents:
- DVD Xpress DX2 Device drivers
- ArcSoft ShowBiz DVD 2 (pre-installed for DVD Xpress DX2
- User's Manual

front

back

6

10. Select the Windows Vista Drivers folder on your CD directory.

11. Click on "hamniwa.reg" file to enable entry of the driver.

12. Click "Yes" to confirm the registry file change then press "OK".

13. For Windows Vista to recognize the driver it requires a system restart. Go to Start Menu, select Shut Down, then Select Restart and press OK.

7

8. Select the folder that contains drivers for your hardware. Computer -> DVD Xpress DX2 -> Windows Vista Drivers -> Windows Vista Drivers

7. Hit "OK", then "Next".

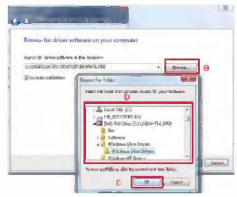

15

## About ArcSoft ShowBiz® DVD 2

ArcSoft ShowBiz DVD 2 is a simple yet powerful application software that lets everything you have in one frame above and create professional looking DVDs. The software features a straightforward step-by-step DVD slideshow sequencing and a more advanced timeline view giving you greater control over your movie clips, audio tracks and transitions effects. Whether more, the program includes many special photo slideshow effects and a full control DVD authoring tools for burning your video presentations to a recordable DVD-R ready for enjoying on TV.

16

## Driver Installation

### Post Driver Installation for Windows Vista User

Note: Do not plug the device into the USB port during post installation under Windows Vista for DVDXpress DX2. Follow the steps on post installation and driver installation carefully. Installing for first time of DVDXpress DX2 under Windows Vista will require this short process.

1. To start go to Start button, click Start then Control Panel.

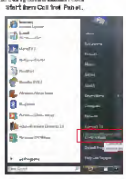

2. Select System on the display panel window.

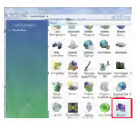

4

## Installation for Windows Vista

1. Connect your video source (VCR, DVD Player, Laser Disc Player, Camcorders, TV, etc.) to the DVD Xpress DX2. Connect the 3 RCA A/V cables to the 3 RCA jacks. If your analog video source (VCR, Laser Disc Player, Camcorders, TV, etc.) to the DVD Xpress DX2. Note: for computer not in Windows completely, use the USB cable to connect DVD Xpress DX2 into a USB port on the your PC.

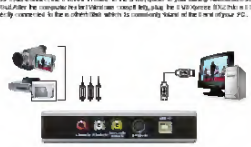

Note:
We strongly recommend if port to use USB hub at the USB port in front of your PC when plugging this device.

5

9. Windows will start searching for driver, and then a screen as shown below will pop up. Select "Install this driver software anyway".

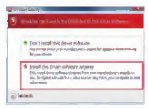

9. Hit Close after Windows successfully installing the driver with Windows Vista.

12

## Note:

Defragment your Hard Drive for best performance

Disk defragmentation consolidates the files and folders on your hard disk and allows the buffer applications to access files more efficiently. It will also help when you are installing and writing new files into your hard disk, please keep in mind that this process requires more amount of free space on your hard disk and it may take the time for the hard disk transfer and store the files to their proper location. Before you defragment your hard disk, you can analyze to see if this step is required.

1. Double-click My Computer
2. Right-Click any Local Drive for the hard disk partitioned in your computer Volume
3. Click on Tools tab
4. Click Defragment Now Button
5. Click Analyze button if you need to defragment the hard disk

### Installation Summary

By now you should have completed the following:
1. Made sure that the Audio and Video connections between DVD Xpress DX2 and your Audio/Video source.
2. Connected DVD Xpress DX2 to the USB Port of your PC.
3. Inserted the drivers and verified that the device is properly installed.
4. Inserted all necessary software post-drivers required for proper operation.
5. Rebooted your System for final performance.
6. Now you are ready to Start Capturing Videos to your PC.

### Start Capturing Videos

Don't forget to "Turn it on and press "PLAY" on your video source (VCR, Camcorders, etc.) so you can capture the video contents.

Now you are ready to start capturing video. See the application to test video capture and playback. Video and ArcSoft ShowBiz DVD 2

17

USBAV-709-CO-QG-071509

Downloaded from www.Manualslib.com manuals search engine